

Quick Card

T-BERD/MTS-2000, 4000 and SmartOTDR Smart Access Anywhere™

This quick card describes how to use **VIAVI Smart Access Anywhere (SAA)** software to remotely operate the T-BERD/MTS-2000, T-BERD/MTS-4000 and SmartOTDR, and how to transfer configuration files, test reports and other data between the instrument and a Personal Computer (PC).

Equipment Requirements:

- PC running Windows operating system
- T-BERD/MTS-2000, 4000 or Smart OTDR equipped with:
 - Software Release V18.50 or greater
 - Wireless option for Wi-Fi Connectivity
- CAT5E or better cable, for remote operation via the T-BERD/MTS RJ-45 Ethernet Management Port
- Internet connection from the PC and T-BERD/MTS or a direct Ethernet/IP connection between the PC and T-BERD/MTS (via LAN or CAT5e or better direct cable attachment)



Download and Install VIAVI Smart Access Anywhere software:

1. On PC open an Internet browser and navigate to VIAVI Smart Access Anywhere software portal: <http://smartaccess.updatemyunit.net/>.
2. Click on link under **Download latest update of SmartAccessAnywhere Software for Windows** to download the latest Smart Access Anywhere software release:



Figure 1: Updatemyunit.net software portal

3. Open the downloaded .ZIP archive and extract the executable Smart Access Anywhere installation image.
4. Double click on the installation image and follow the on-screen instructions to install the Smart Access Anywhere application.

Configure T-BERD/MTS Connectivity Settings:

1. Press the **ON/OFF** button  to turn on the T-BERD/MTS or SmartOTDR.

2. Press the **HOME** button  to display the **Home Screen**.

3. Tap the **Connectivity** icon  to view the **Connectivity Screen**.

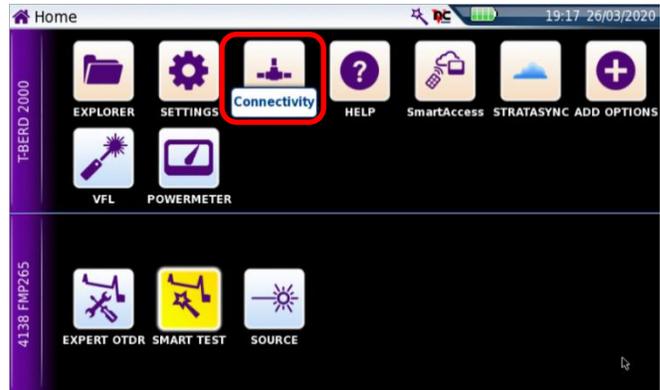


Figure 2: Home Screen

4. For remote access using **Wi-Fi**:

- a. Tap the **Wireless 802.11** icon  to view Wireless Connectivity settings.
- b. Tap the **Wireless** softkey  to enable wireless configuration.
- c. Set **Wlan Mode** to **Wireless Client**.
- d. Tap the **Scan SSID** softkey  ,
- e. Tap to highlight the desired Wi-Fi network, and tap **Select**.
- f. If required, tap on **Key/Password** field to provide login credentials to join the network and obtain an IP address.
- g. Tap the **Connect SSID**  and verify the Wifi icon is now amber .
- h. Tap the **Exit** soft key  to return to the **Connectivity Screen**. The IP Address will be displayed in the lower half of the screen.

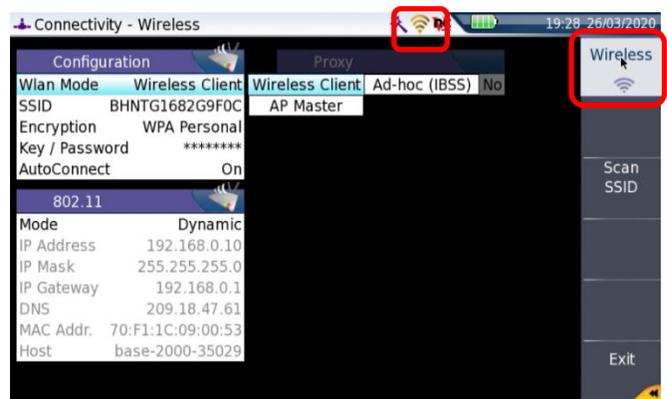


Figure 3: Wireless Connectivity Settings

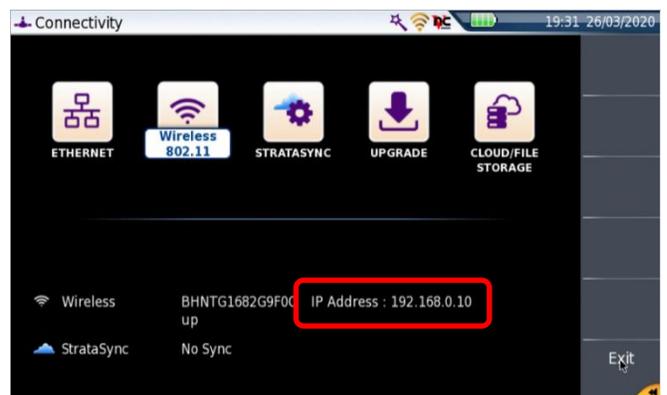


Figure 4: Connectivity Screen

5. For remote access using the T-BERD/MTS **RJ-45 Ethernet Management Port**:

- a. Tap the **Ethernet** icon  to view Ethernet Connectivity settings.
- b. Open the flap on the top of the test set to access the management ports.
- c. Connect CAT5E or better cable between the T-BERD/MTS RJ45 connector and the router or PC.



Figure 5: T-BERD/MTS 2000, Top view

- d. If using DHCP, set **Mode** to **Dynamic** and wait until unit obtains an IP address.
- e. Otherwise, set **Mode** to **Config 1** and configure a static IP address.
- f. Tap the **Exit** soft key  to return to the **Connectivity Screen**. The IP Address will be displayed in the lower half of the screen.

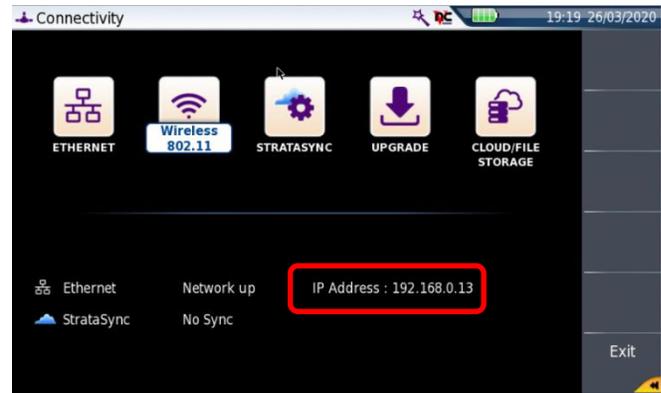


Figure 6: Connectivity Screen

6. If you are establishing the remote connection via the internet, tap the **Smart Access** icon  to register with the VIAMI Smart Access Anywhere (SAA) server and obtain the access code. Once the unit is connected, note the **Access code**. The access code must be used if the T-BERD/MTS is on a private network, such as a Wi-Fi Hotspot or Wireless LAN.



Figure 7: Access Code

Operate the T-BERD/MTS 2000 from your PC using Smart Access Anywhere:

1. Launch the VIAMI SmartAccessAnywhere application  and enter the T-BERD/MTS Access Code or IP Address in the text box labeled **Access code or local IP address**.

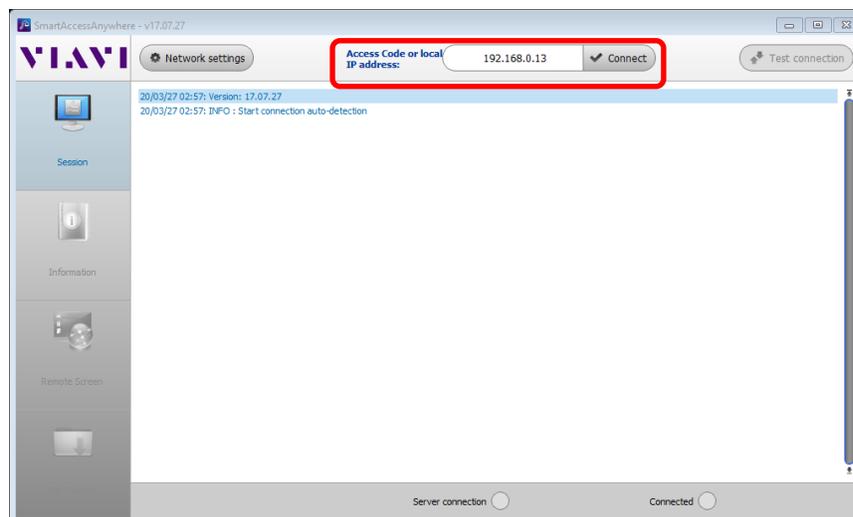


Figure 8: SmartAccessAnywhere Session Screen

2. Click the **Connect** button  and wait for connection.

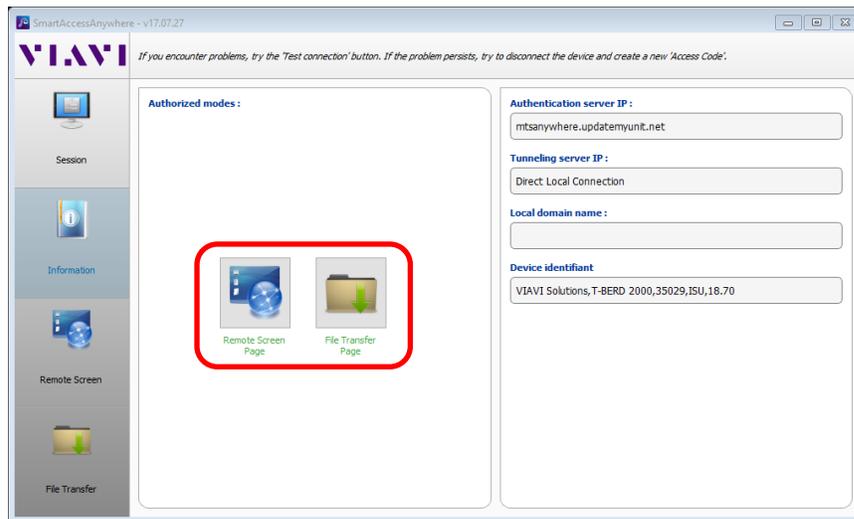


Figure 9: SmartAccessAnywhere Information Screen

3. Click the **File Transfer Page** icon  and select any configuration files, reports, or other files and use the  **Upload** or  **Download** buttons to copy the file(s) to/from the T-BERD/MTS.
4. Click the **Remote Screen Page** icon  to gain access to the T-BERD/MTS user interface, where you can configure tests, run tests, or perform any other actions using your mouse instead of the touchscreen.

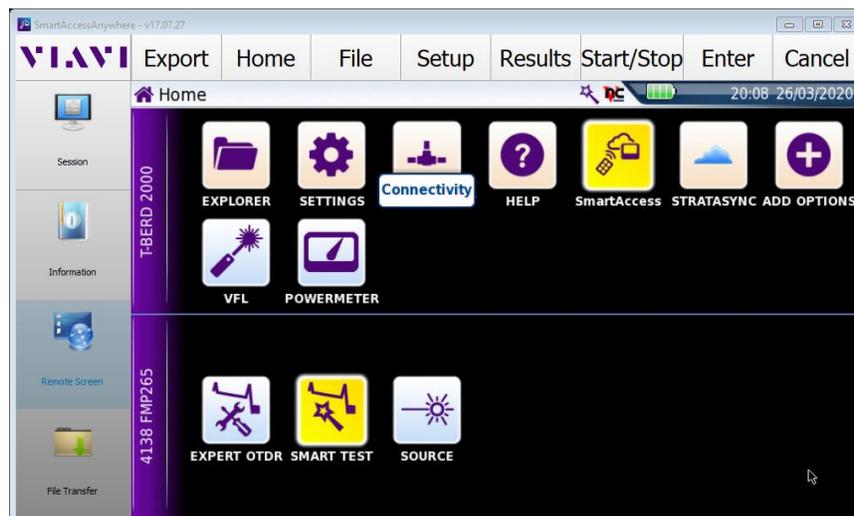


Figure 10: SmartAccessAnywhere Remote Screen Page