

Quick Card

T-BERD®/MTS 4000v2 Modular Test Set

Real Time Testing with Smart Test Assistant

This quick card describes how to connect to a fiber under test, configure **SMART TEST Assistant** with **Real Time** test OTDR settings, run tests, and analyze results with a VIAVI T-BERD/MTS 4000v2 and 4100-series OTDR module.

Equipment Requirements:

- T-BERD/MTS-2000 or 4000 with Fiber Optics Software Release V21.04 or greater
- E4100 Series OTDR Module
- Fiber optic cleaning and inspection tools
- Launch Cable with connectors matching the OTDR port and Fiber Under Test (a minimum 20-meter Fiber optic patch cable or leash is recommended)
- Optical Coupler to connect Launch Cable to Fiber Under Test



Figure 1: Equipment Requirements

The following information is required to complete the test:

- Type of Fiber (Multimode or Single Mode)
- Type of Connectors (SC UPC, SC APC, LC UPC, etc.)

Fiber Inspection Guidelines:

- Use the VIAVI P5000i or FiberChek Probe microscope to inspect both sides of every connection being used (OTDR Port, Launch Cable, bulkhead connectors, patch cords, etc.)
- Focus fiber on the screen. If dirty, clean the end-face.
- If it appears clean, run inspection test.
- If it fails, clean the fiber and re-run inspection test. Repeat until it passes.

CLEAN NO YES CONNECT

Figure 2: Inspect Before You Connect (IBYC)

Connect Launch Cable to OTDR port:

- 1. Inspect the OTDR port on top of the test set.
- 2. Inspect the fiber end face of Launch Cable.
- 3. Connect Launch Cable to the OTDR port.



Figure 3: OTDR Port Inspection



Connect to Fiber Under Test (FUT):

The Launch Cable may be connected to the FUT via an optical patch panel (OPP) or an optical coupler:

- If the interface to the FUT is a patch cord, connect the patch cord to an optical coupler with the same connector type.
- Inspect the FUT connected to the coupler or OPP.
- 3. Inspect the other fiber end face of the Launch Cable.
- Connect the Launch Cable to the coupler or OPP.

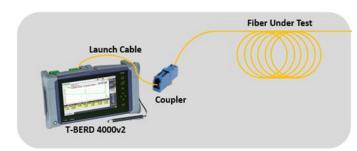


Figure 4: Connecting the Launch Cable to the FUT with a coupler

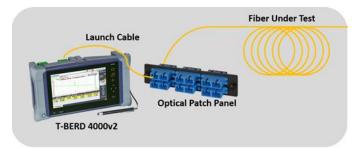


Figure 5: Connecting the Launch Cable to an OPP

Launch Smart Test Assistant:

- 1. Press the Power button to start the T-BERD/MTS test instrument.
- 2. Tap the **SMART TEST** icon until it is yellow and highlighted singlemode Smart TEST.

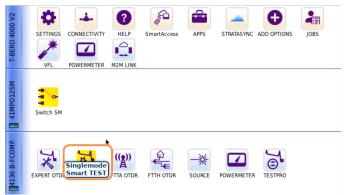


Figure 6: Fiber Optics Home screen

Please select a user configuration file

CERTIFICATION_AutoTest_20s

EXPRESS_AutoTest_5s

A

/disk/config/SMART_TEST

LOAD

Figure 7: SMART TEST Configuration Files

- 3. Select the **CERTIFICATION_AutoTest_20s** configuration file.
- 4. Tap to load the configuration and view the **SMART TEST Setup** screen.



Configure Test:

- 1. Laser: If the wrong wavelength is selected, tap the screen to deselect. Tap the desired wavelength to test.
- 2. Distance Unit: Tap the desired unit of measure.
- 3. Launch Cable: Tap to select No.
- 4. Alarms: Tap to select No.

보 중 pc 99% --- 06:51 31/05/202 1310 nm 1550 nm Laser **Distance Unit** km miles meter Launch Cable No Yes Alarms Nq Figure 8: SMART TEST Setup

Run Test:

- to start the test. 1. Tap
- 2. After auto-configuration, the OTDR will perform a connection check to ensure that the connection is **Good**. If the Connection is Bad, disconnect the launch cable, and reconnect as described on pages 1 and 2, cleaning every end-face that fails the inspection test.
- 3. The OTDR will perform real-time acquisitions at the configured wavelength.
- 4. Tap the magnifying glass icons to zoom in e. zoom out a vor auto-zoom the display. You can also pinch and zoom with your fingers.
- 5. Tap the **Measurements** soft key start measurements.
- 6. Tap the **Test** roll down menu at the bottom left screen to select a measurement type: Loss, ORL, or Reflectance.
- 7. Tap and move the **A** and **B** cursors to change measurement values.
 - Loss and ORL are measured between the two cursor positions.
 - **Reflectance** is measured at the position of the **B** cursor.
- 8. Tap the **STOP** soft key to stop the Real Time measurement.

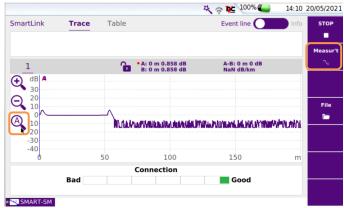


Figure 9: Connection Check & RealTime test

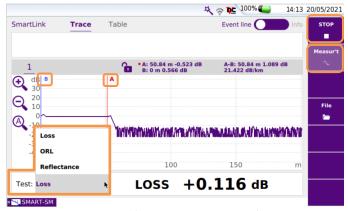


Figure 10: Trace View, Loss Result



Figure 12: Trace View, Reflectance Result