

# TestifierPRO™ TP650

## Cable Tester

### Quick Start Guide



## Essentials of Cable Testing

- Plug the cable into the correct input (1), Telco to RJ11, Coax to F-connector, Network (Ethernet) to RJ45
- Plug the opposite end into the Remote (10) for telco and network tests, or the coax remote for coax tests.
- Press the appropriate mode button (2, 3, 4) for the cable being tested. Repeated presses of a mode button cycles through all the tests available for that mode.
- When the desired test option is displayed (such as tone or length measurement), press SEL (6) to execute the test.

## Functions

- Cable ID:** Use up to 8 full test remotes (included in TP655 kit) or up to 20 ID-only remotes (optional) to identify cable runs.
- Length Testing:** Measure opens length of cable using capacitance. SEL (6) to select pair, Up and down arrows (5, 7) to select capacitive constant.
- Toning:** Send tone on individual pins, pairs or shield and trace with a probe. SEL (6) cycles through available tones, Up and down arrows (5, 7) select pin or pair (or shield for coax) tone is sent on.
- Cable Testing:** With no remote connected, will test for shorts, opens and split pairs. Full wiremapping with remote connected.
- Hub Blink:** Flashes the Link LED on an Ethernet device. Simple method of identifying which port a cable is connected to.
- Setup Button (8):** Up and down arrows (5, 7) cycle through three settings: Pass Beep on/off, Units – Feet/Meters, Shielded or un-shielded telco and network cables.
- Backlight:** Quickly pressing the Power Button (9) turns the backlight on/off



## Button Functions

- Inputs (RJ11, Coax & RJ45)
- Telco Mode Button
- Coax Mode Button
- Network Mode Button
- Up Arrow
- SEL (Select) Button
- Down Arrow
- SETUP Button
- Power Button
- Remote