



**How to Upgrade OTU5k from OTU-Manager**

**OTU5K**

# How to Upgrade OTU5k from OTU-Manager




## Placing Firmware:

Required firmware needs to be placed on server at location as mentioned below:

`/opt/rfts_apps/data/otu-manager/firmware`

## Launch OTU-MANAGER on ONMSi:


1. Login ONMSi Home Page
2. Click on More
3. Click on “Manage OUT’s Using OUT-Manager
4. Separate OUT-Manager Window will be launched

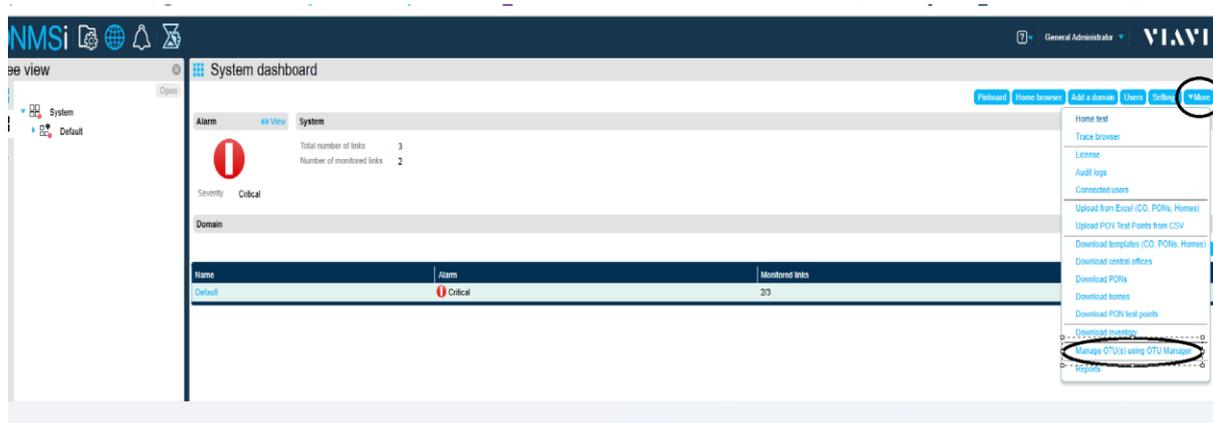

# How to Upgrade OTU5k from OTU-Manager




## OTU-Manager Window:

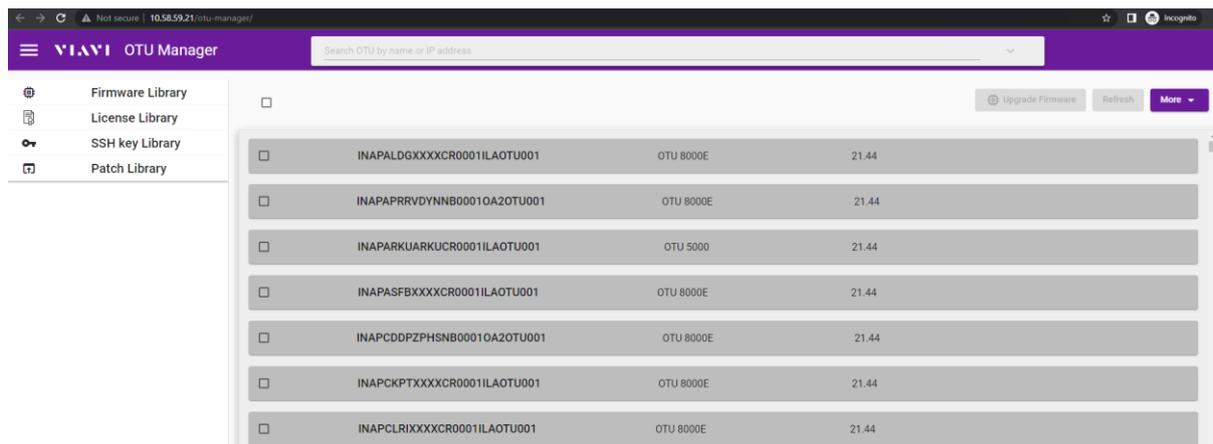


## Upgrade Procedure:

- 1. Select node to be upgraded.**
- 2. Click on Upgrade Firmware**

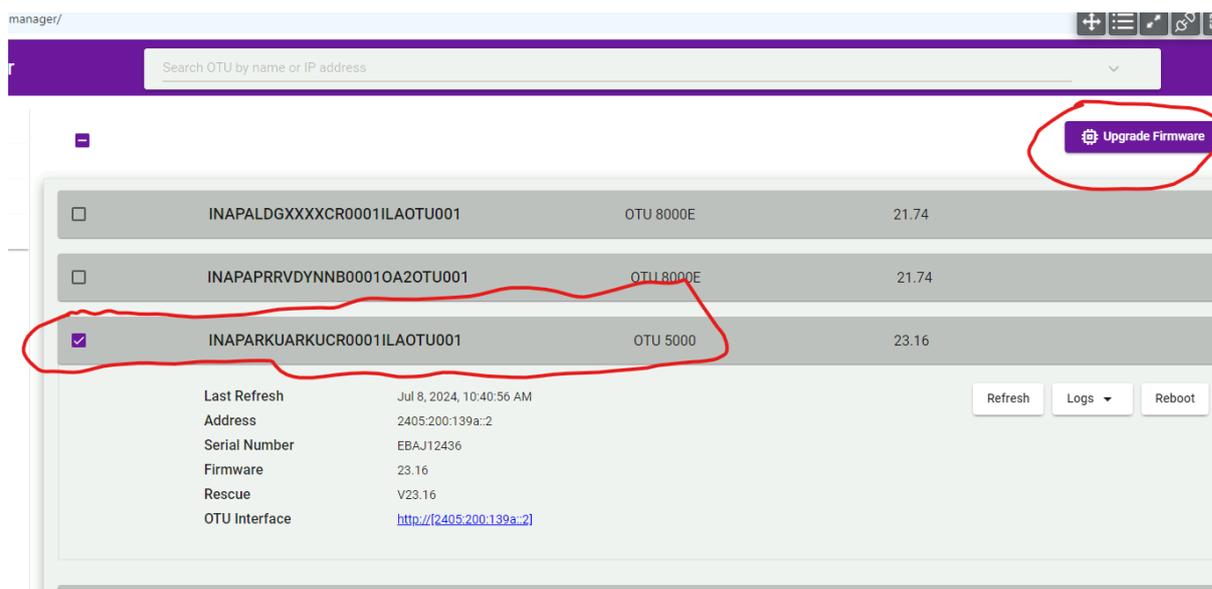

**2. Select Firmware to be upgraded and Part to be upgraded and press OK.**

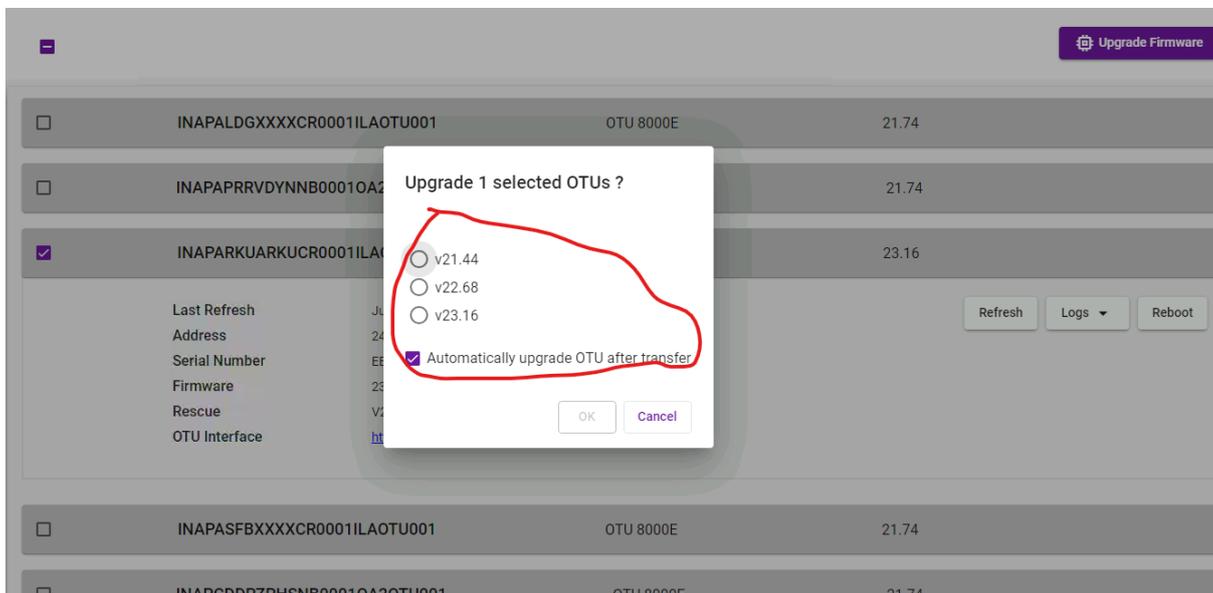

**3. This will start upgrading of OTU5K**

**4. Once Upgrade is completed it will show in the Firmware Version and Rescue Version which should be the one for which upgrade is done.**

### Upgrade Completed

OTU5000 FW : After upgrade is completed it should show the version you have selected