


How to check the internal switch part number?

How to check the internal switch part number?

Procedure

1. Go to maintenance on top left corner.

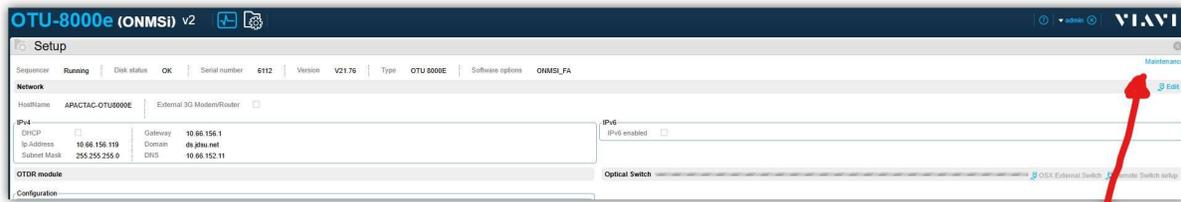


2. Put command below in the



OTU:ESWITCH:LIRE
OTU:ESWITCH:HARD?

How to check the internal switch part number

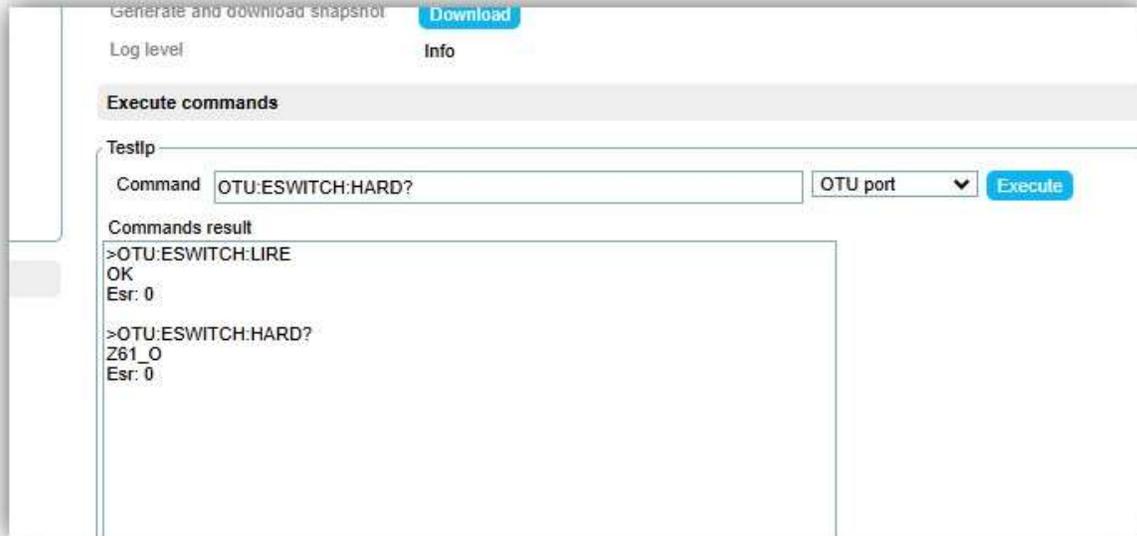

3. Check the output is Z60 or Z61.

If Z60 it is E98OS 0n (n=2,4,8,12,16,24)

If Z61 it is E98X 0n (n=4,8, 12, 16, 24, 36, 48)

For any other technical information inquiries, please contact us at tac.apac@viavisolutions.com