

How to config the new IP on ONMSi Software




How to config the new IP on ONMSi Software

In any case, to configure static IP you can check the procedure internet for each OS.

For ONMSi, you need to update the configuration in



1. ONMSi application setting

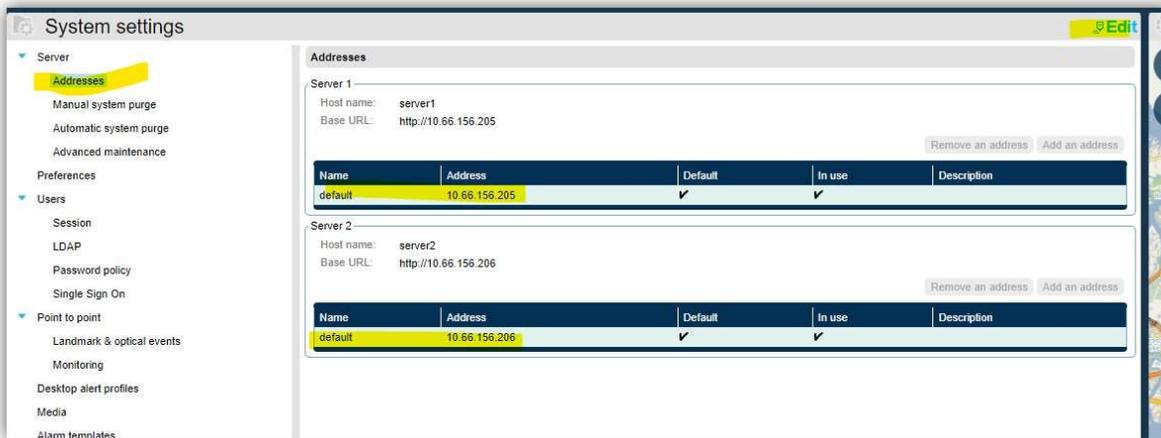

2. Skipper.

```
[root@server1 ~]# skipper -p password
Please point your web browser to Skipper UI URL (e.g. http://server1/skipper)
Then login with following credentials:
- username: admin
- password: password
[root@server1 ~]#
```

How to config the new IP on ONMSi Software

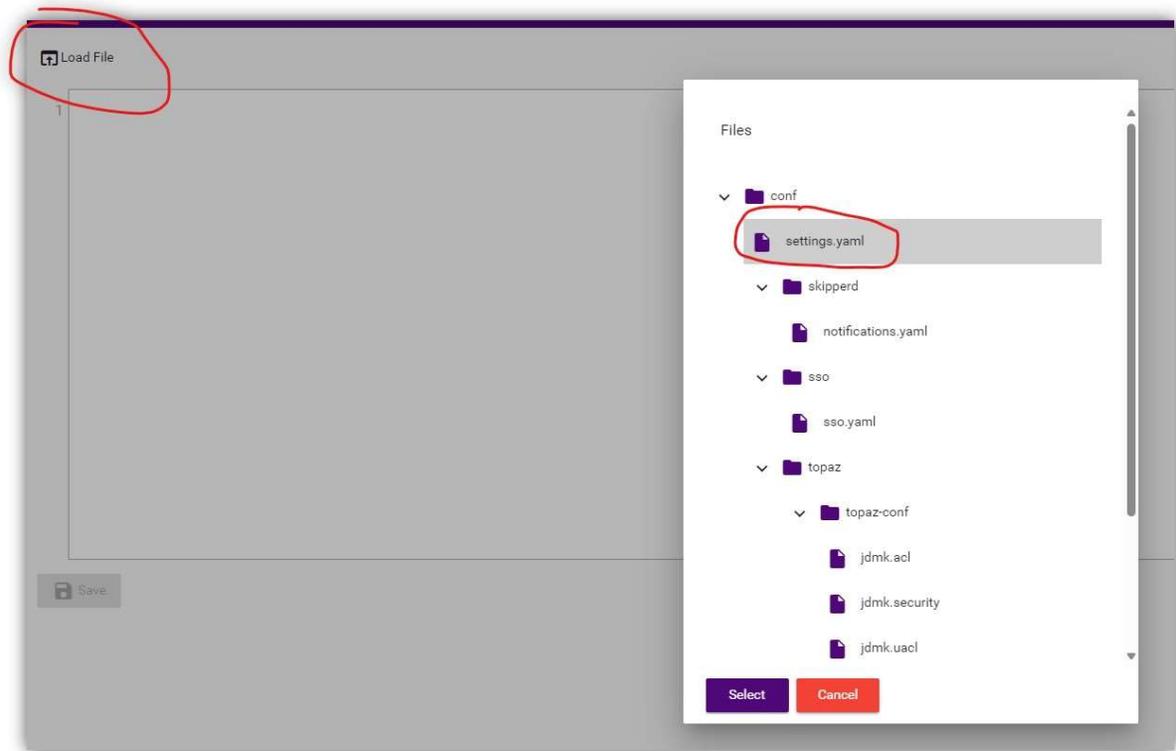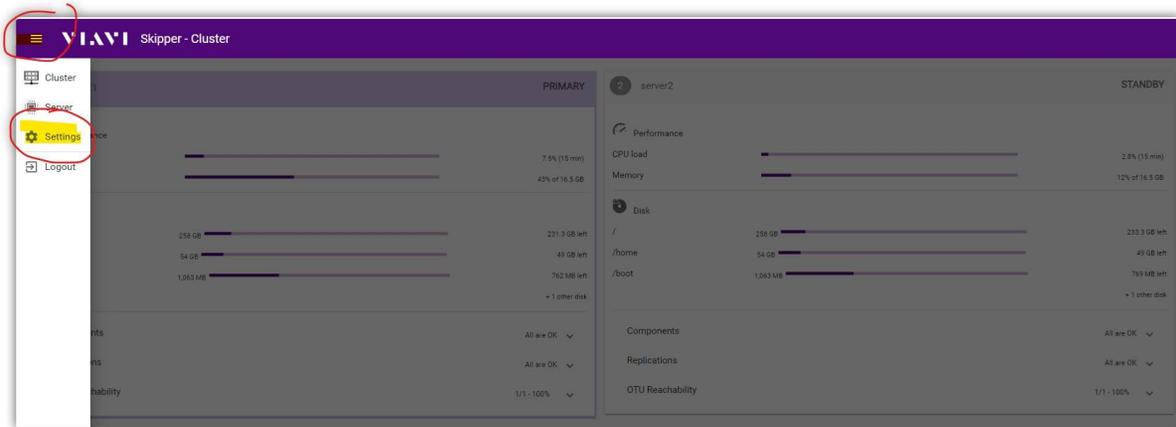

How to config the new IP on ONMSi Software

```
Load File
settings.yaml
1 #####
2 # ONMSi configuration file
3 #####
4 services:
5   backup:
6     directory: /backup
7   map:
8     enabled: true
9     backmap:
10      mode: osm
11
12 servers:
13   1:
14     name: server1
15     address: 10.66.156.205
16   2:
17     name: server2
18     address: 10.66.156.206
```

For any other technical information inquiries, please contact us at tac.apac@viavisolutions.com