


How to disable SNMP notifications



Click System -> Users

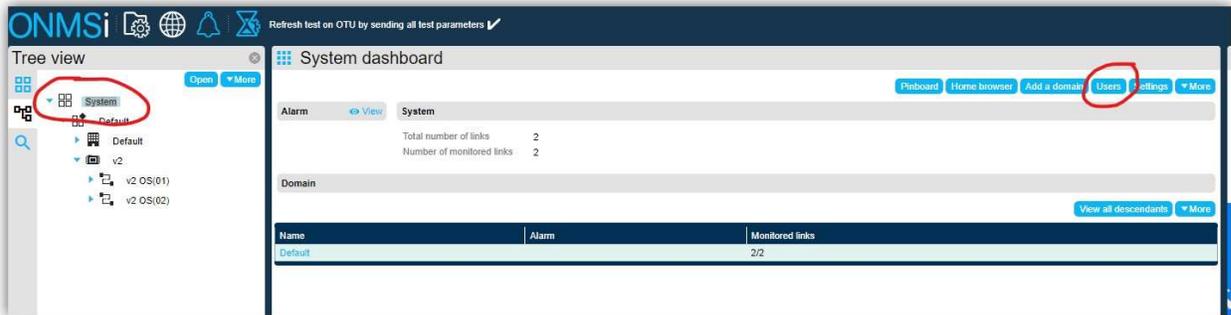

Go to API users.

Select the respective SNMP or any alarm notifications user to disable it during link provisioning.

Note: During this, any genuine alarm from another OTUs or link will have no notifications as well.



For any other technical information inquiries, please contact us at tac.apac@viavisolutions.com