

< JDViewer using USB Cable >

1. Setting on the CellAdvisor

- a. Press #3 button(System) → System Configuration → Remote Interface → Select "APP SW"

2. Setting on the JDViewer

- a. Select "Settings" → "Communication"
 - i. In Instrument field, Select correct product (in this case, select JD780A/780B/740B series)
 - ii. In Connection Method field, Select "USB"
- b. Select "Load" → "Connect"
- c. Select "Load" again → "Load Saved"

< JDViewer using crossover LAN Cable >

1. Setting on the CellAdvisor

- b. Press #3 button(System) → System Configuration → Select "APP SW"
- c. Press #3 button(System) → System Configuration → Ethernet Config → IPv4
 - i. Put IP Address to 192.168.0.5
 - ii. Put Subnet Mask to 255.255.255.0
 - iii. Select "Apply"

2. Setting on the PC

- a. Go to 'Network & Sharing Center'
- b. Select the LAN network and open its Properties menu
- c. Select IPv4 to bring up its Properties menu
- d. Under Properties setup a static IP address:
 - i. Select "Use the following IP address"
 - ii. Example: IP Address: 192.168.0.7
 - iii. Subnet: 255.255.255.0

3. Setting on the JDViewer

- a. Select "Settings" → "Communication"

- i. In Instrument field, Select correct product (in this case, select JD780A/780B/740B series)
 - ii. In Connection Method field, Select TCP/IP (IPv4) and put "192.168.0.5"
- b. Select "Load" → "Connect"
 - c. Select "Load" again → "Load Saved"