

Quick Card

T-BERD®/MTS-2000 Modular Test Set

Using an iOS Personal Hotspot for Connectivity

This procedure describes how to connect a T-BERD/MTS-2000 or SmartOTDR to an iPhone or iPad Hotspot via WiFi.

Equipment Requirements:

- T-BERD/MTS-2000 or SmartOTDR equipped with the following:
 - Software Release V16.22 or greater
 - Wireless option for Wi-Fi Connectivity
- iPhone or iPad
 - o iOS 6.0 or later

iPhone setup:

1. Turn on the iPhone or iPad.



- Tap the Settings icon on the iPhone or iPad.
- Turn on the iPhone/iPad Personal Hotspot by sliding the button right. The button should show green. Make sure to note the Wi-Fi PASSWORD. It will be entered into the test set to connect it to the Hotspot.



Figure 1: iPhone Settings screen







Figure 2: iPhone Personal Hotspot



OTDR setup:

2.

3

1. Press the **ON/OFF** button to turn on the T-BERD/MTS-2000.



Figure 3: Home Screen

POWERMETER

- 3. Tap the **Connectivity** icon to display connectivity options.
- 4. Tap the Wireless 802.11 icon to display Wireless Connectivity settings.
- 5. Wireless

 If the screen displays "Wireless is disabled", tap the Wireless soft key to enable WiFi.
- 6. Wlan Mode to Wireless Client.
- 7. Tap the **Scan SSID** Soft Key to list SSIDs.

4146 QUAD

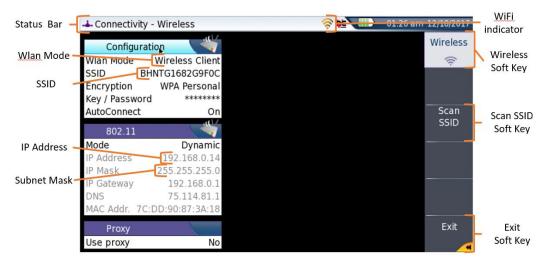


Figure 4: Wireless Connectivity settings

8. Tap or use the arrow keys to highlight the WiFi Hotspot and tap the **Select** soft key.



- 9. Enter the Wi-Fi Password from the iPhone's Personal Hotspot setting.
- 10. If Wi-Fi Connection is established, the Wi-Fi icon in the Status Bar will turn yellow.
- 11. Tap the **Exit** soft key to return to the **Connectivity** screen. The IP Address and SSID are displayed in this screen.



Figure 5: Connectivity screen